



de Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montage-aanwijzing
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje
da Monteringsvejle
pl DN ing
cz Instrukcja montaży
hu Montázsí návod
el Szerelési útmutató
ru Οδηγίες εγκατάστασης
zh Инструкция по установке
安裝指導

Adapter
Adapter
Adaptateur
Adapter
Adapter
Adattatore
Sovitesarja
Adaptador
Adapter
Łącznik
Adapter
Adapter
Προσαρμογέας
Переходной фитинг
配套连接件

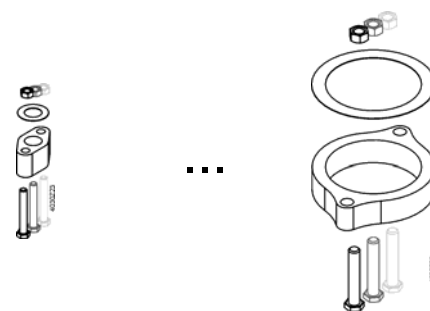

ALF41B..

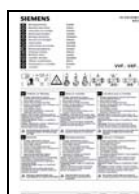

74 319 0749 0
M4030

DN	VXF41..	ALF41B..	#	
15	VXF41..	ALF41B15	S55845-Z110	4x M12x90 mm
25	VXF41..4	ALF41B25	S55845-Z111	4x M12x90 mm
40	VXF41..5	ALF41B40	S55845-Z112	4x M16x90 mm
50		ALF41B50	S55845-Z113	4x M16x90 mm
65	VXF41..	ALF41B65	S55845-Z114	4x M16x90 mm
80	VXF41..4	ALF41B80	S55845-Z115	8x M16x110 mm
100	VXF41..5	ALF41B100	S55845-Z116	8x M16x110 mm
125		ALF41B125	S55845-Z117	8x M16x110 mm
150		ALF41B150	S55845-Z118	8x M20x110 mm

