


de	Montageanleitung
en	Mounting instructions
fr	Instructions de montage
sv	Monteringsinstruktion
nl	Montage-handleiding
it	Istruzioni di montaggio
fi	Asennusohje
es	Instrucciones de montaje
da	Monteringsvejledning
pl	Instrukcja montażu
cz	Montážní návod
hu	Szerelési útmutató
el	Οδηγίες εγκατάστασης
ru	Инструкция по установке
zh	安装指導

Schneckengetriebe
Worm gear
Engrenage à vis sans fin
Snäckväxel
Wormwielerstelling
Ingranaggio a vite senza fine
Vaihteisto
Engranaje helicoidal
Snekkedrev
Przekładnia ślimakowa
Šnekové kolo
Kézi mozgató szerelvény
Χειροκίνητος μοχλισμός
Червячная передача
蜗轮式手动开关装置


ASK46.4



1

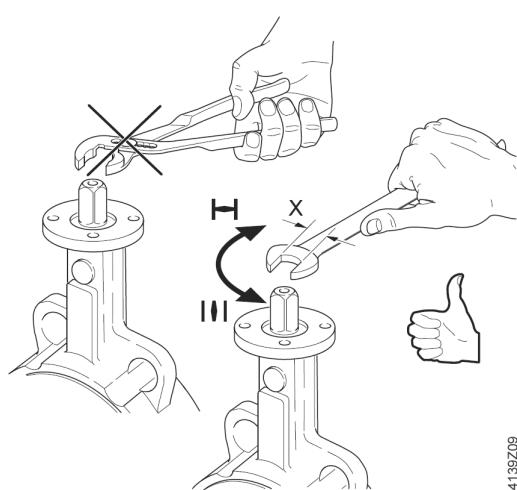


4139209

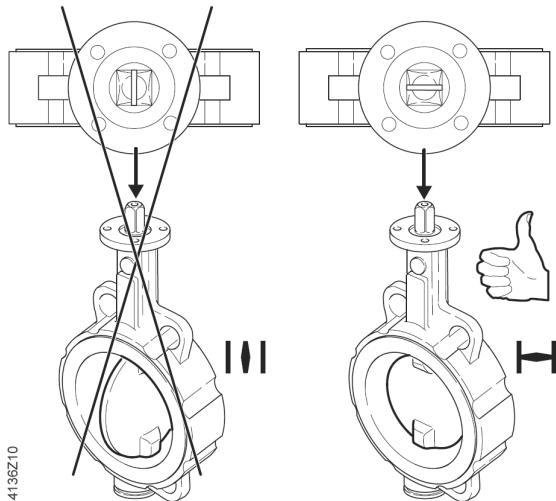


4136Z10

2

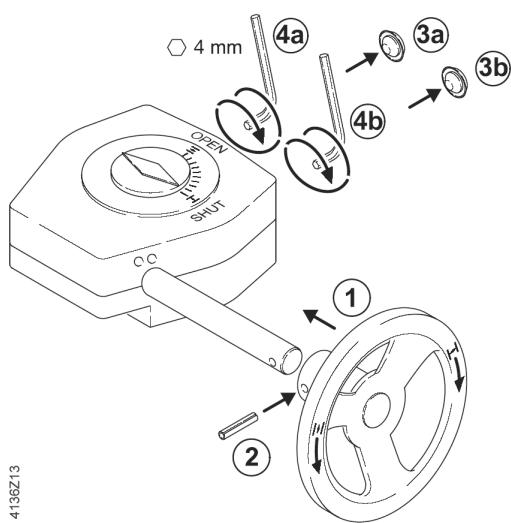

4136Z13


3

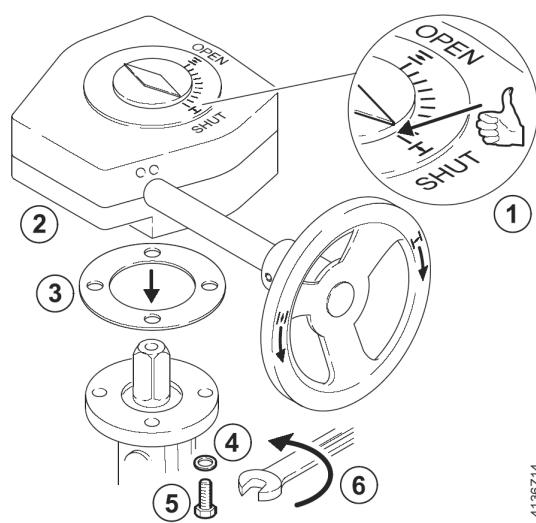

4136Z14


4

4136Z15



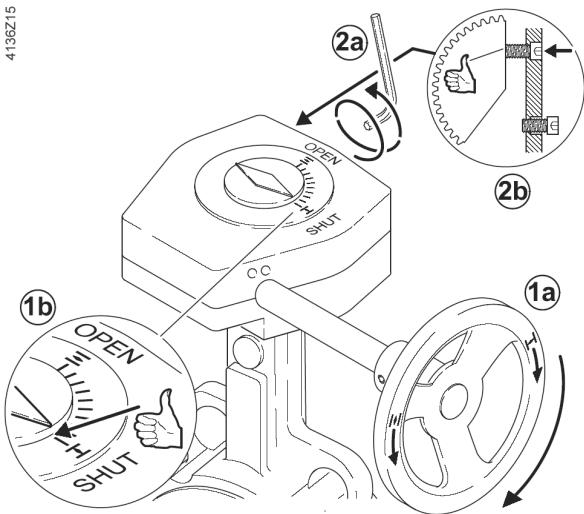


5

4136Z16

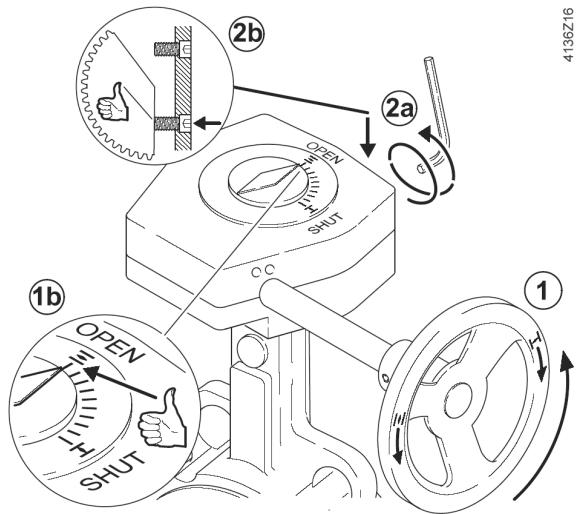

6

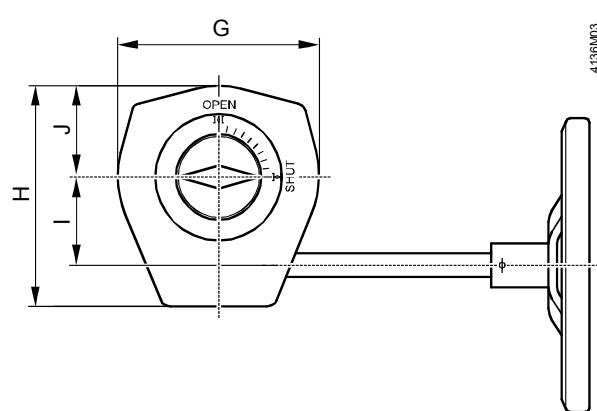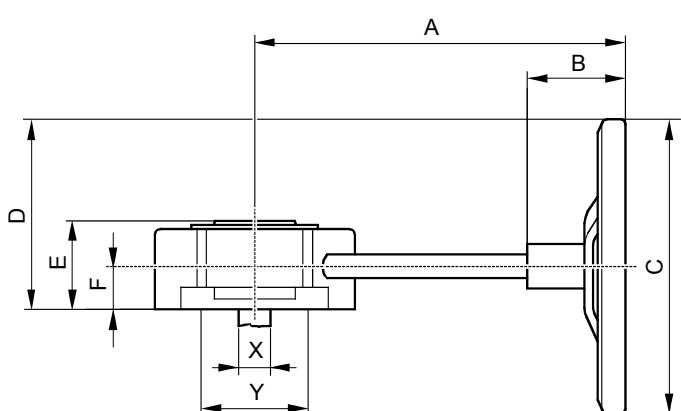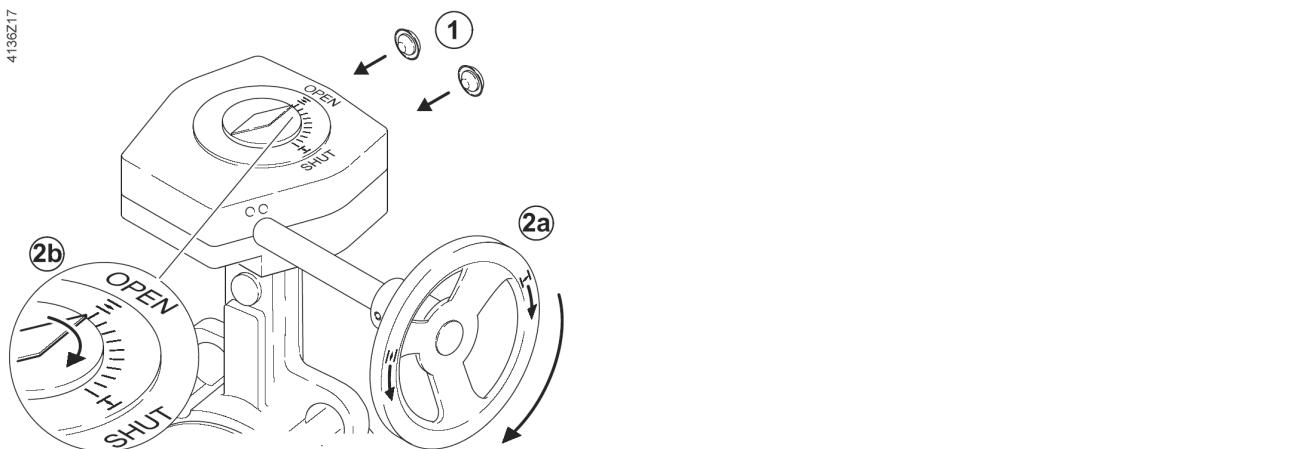

4136M03

	DN	A	B	C	D	E	F	G	H	I	J	X	Y	\square [kg]
ASK46.4	250...400	252	67	200	129	60	29	137	150	60	62	22	100	3.38