
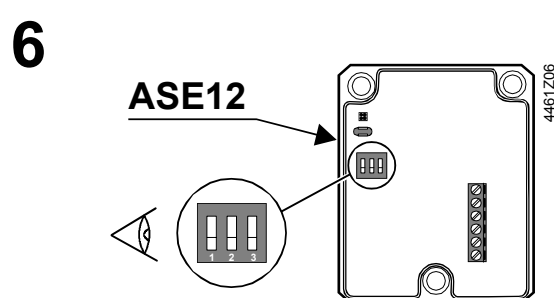
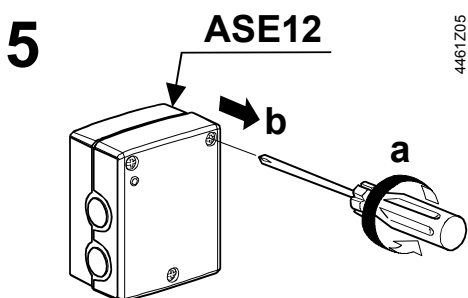
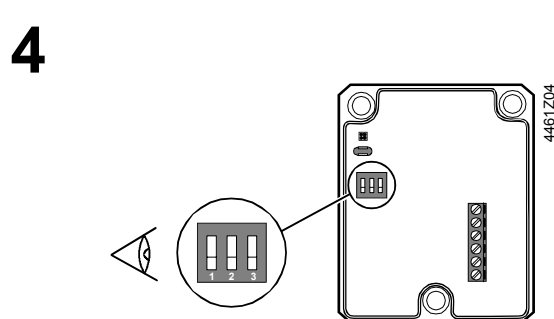
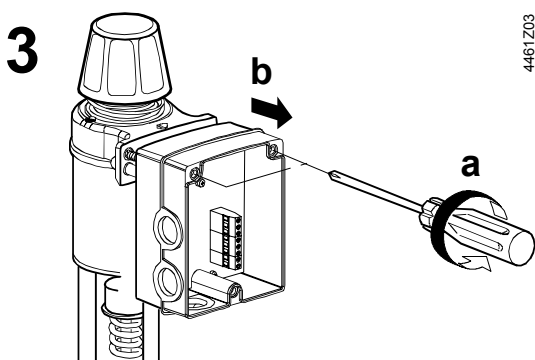
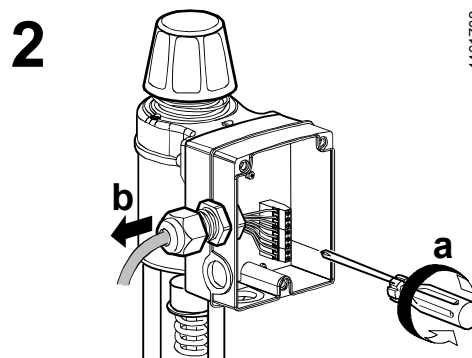



de	Montageanleitung
en	Mounting instructions
fr	Instructions de montage
sv	Monteringsinstruktion
nl	Montage-aanwijzing
it	Istruzioni di montaggio
fi	Asennusohje
es	Instrucciones de montaje
da	Monteringsvejledning
pl	Instrukcja montażu
cz	Montážní návod
hu	Szerelési útmutató

Austauschelektronik für MXG461B + MVF461H
Replacement electronic for MXG461B + MVF461H
Electronique de remplacement pour MXG461B + MVF461H
Utbyteselektronik för MXG461B + MVF461H
Uitwisselektronica voor MXG461B + MVF461H
Sostituzione scheda elettronica per MXG461B + MVF461H
Vaihtoelektronikka tyypeille MXG461B + MVF461H
Repuesto electrónico para MXG461B + MVF461H
Ombytningselektronik for MXG461B + MVF461H
Elektronika zamienna do MXG461B + MVF461H
Náhradní elektronika pro MXG461B + MVF461H
Csereelektronika MXG461B és MVF461H beavatkozókhoz


ASE12

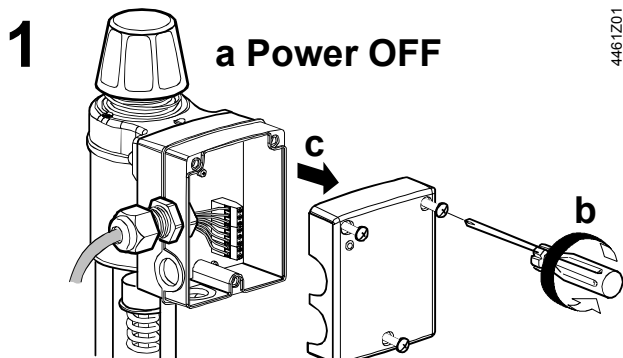


7

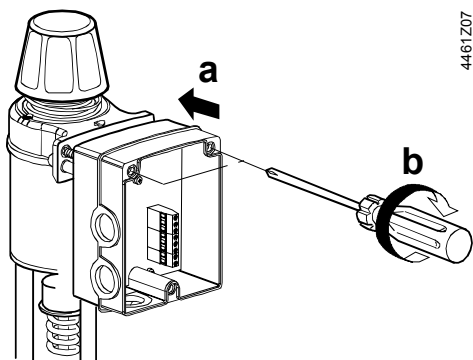


8

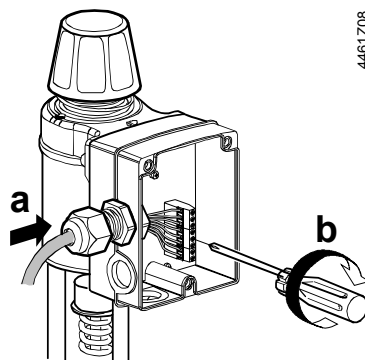


Controller DC 0 ...10 V / 2 ... 10 V
0 ... 20 mA / 4 ... 20 mA

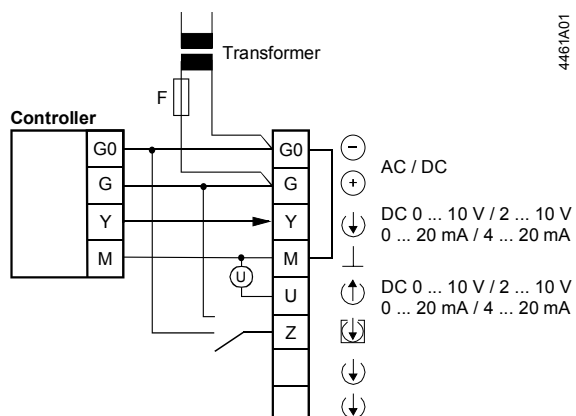

Controller 0 ... 20 V Phase cut

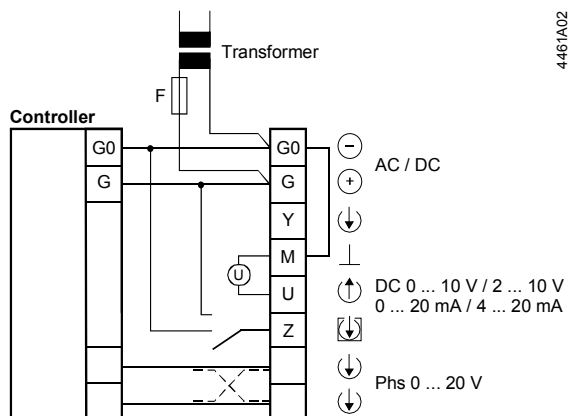

9 a Power ON

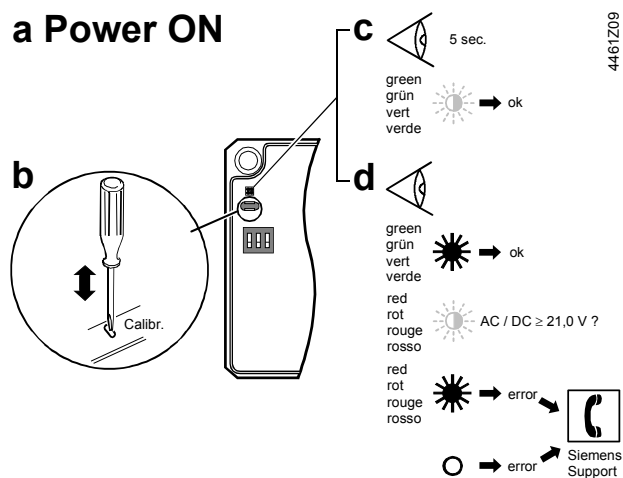

10

