



de Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montage-aanwijzing
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje
da Monteringsvejledning








QFA31... + AQF3100

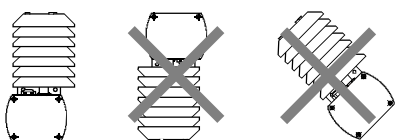



1858Z11

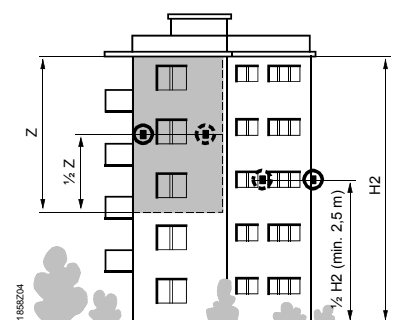

 Z = Zone, zone, zône, zon, Zône, zona, Rymä, Zone, Zona

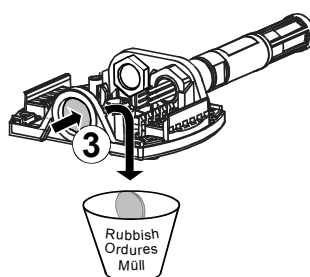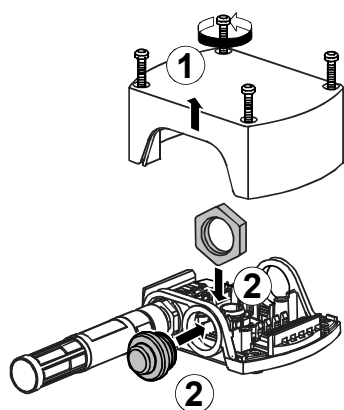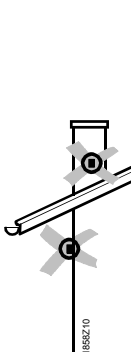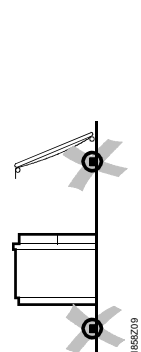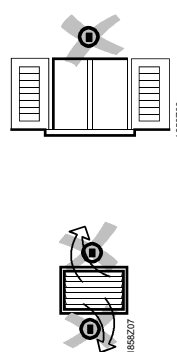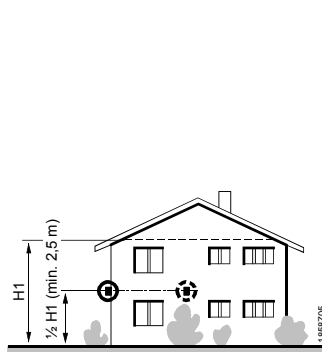





Rubbish
Ordures
Müll

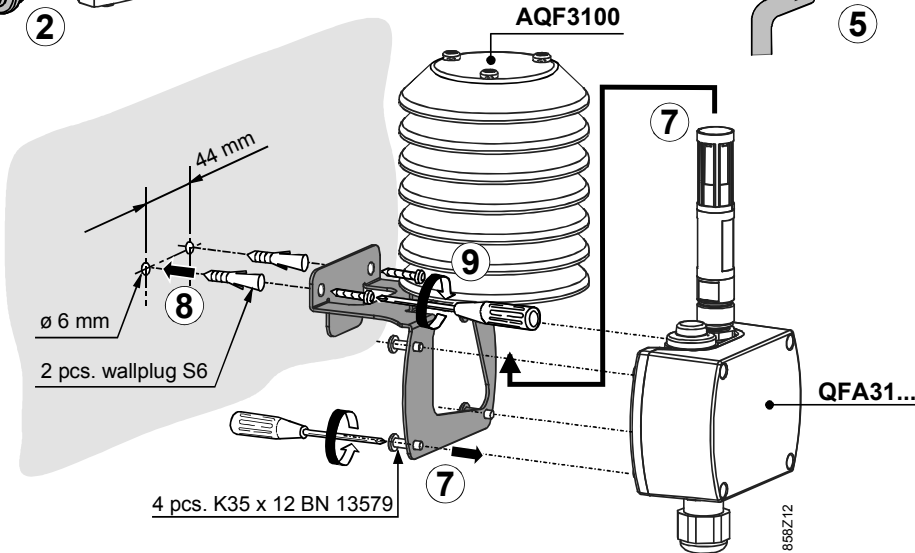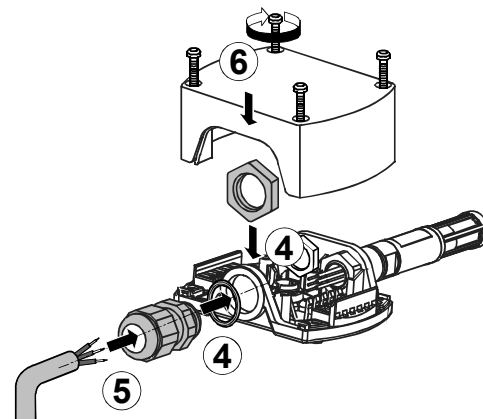

de Anschlussklemmen
en Connecting terminals
fr Bornes de raccordement

sv Anslutningsklämmor
nl Aansluitklemmen
it Morsettiere




fi Liittimet
es Bornas
da Tilslutningsklemmer

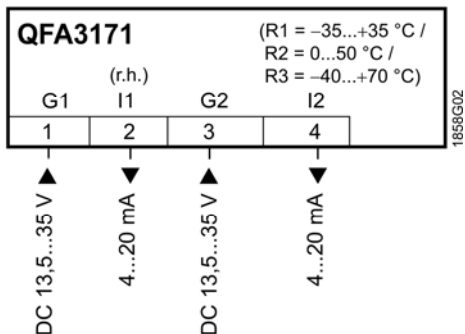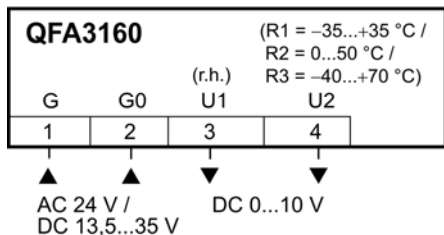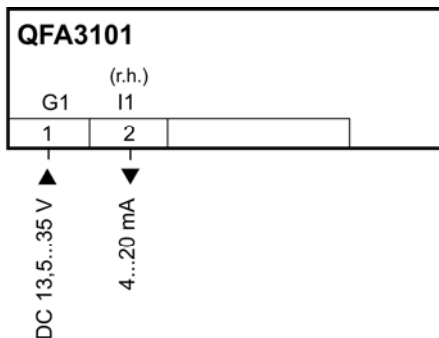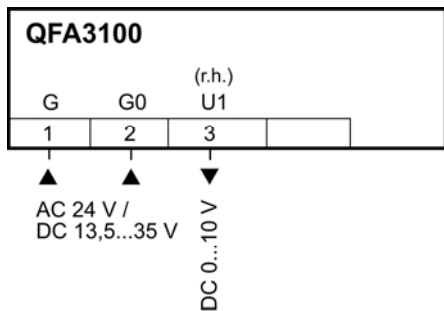

de Maßbilder
en Dimensions
fr Encombremments

sv Måttuppgifter
nl Maatschets
it Ingombri

fi Mittapiirros
es Dimensiones
da Målskitse

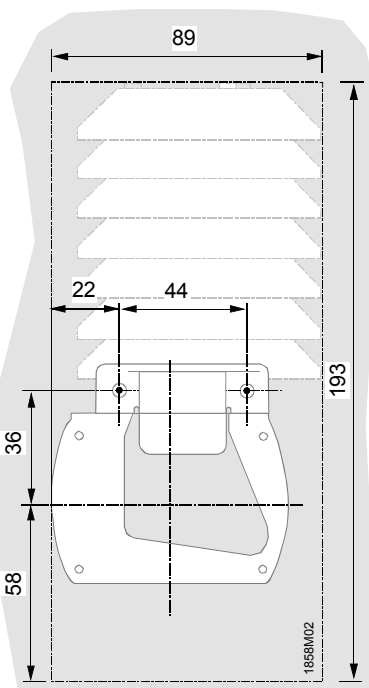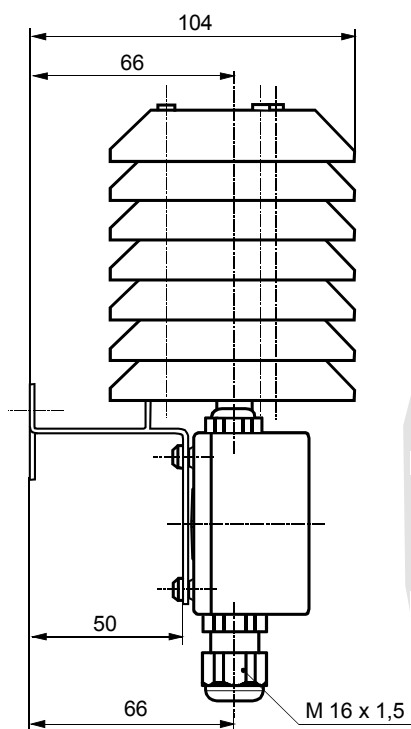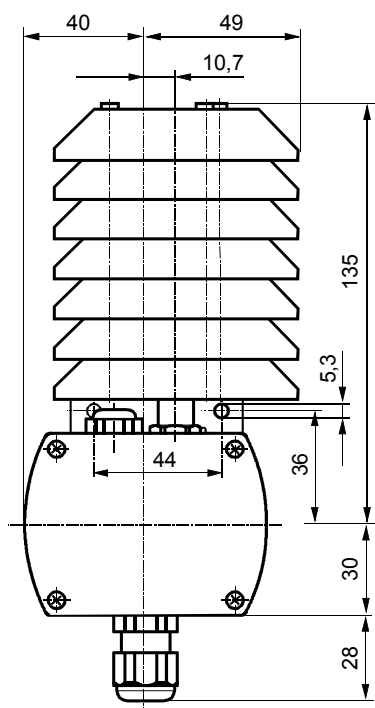

Maße in mm
 Dimensions in mm
 Dimensions en mm
 Mått i mm
 Maten in mm
 Dimensioni in mm
 Mitat mm
 Dimensiones en mm
 Mål i mm