

de	Montageanleitung
en	Mounting instructions
fr	Instructions de montage
sv	Monteringsinstruktion
nl	Montage-aanwijzing
it	Istruzioni di montaggio
fi	Asennusohje
es	Instrucciones de montaje
da	Monteringsvejledning
pl	Instrukcja montażu
cz	Montážní návod
hu	Szerelési útmutató
el	Οδηγίες εγκατάστασης
ru	Инструкция по установке
zh	安裝指導


Stösseldichtung
Stem sealing gland
Joint d'étanchéité d'axe
Spindeltätning
Spindelafdichting
Premistoppa stelo
Karatiiviste
Racor de cierre de vástago
Tætningsflange for ventilspindel
Uszczelnienie trzpienia
Ucpávka vřetene
Szelepszár tömítés
Στέλεχος άξονα
Сальник уплотнения штока
閥杆密封函



4030Z39




4030Z30

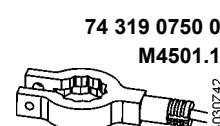

74 319 0750 0
M4501.1

4030Z42

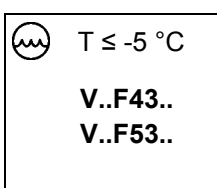


T ≤ -5 °C
V..F43..
V..F53..

ASZ6.6

4 284 8806 0



 4030Z42




4030Z39




27 mm

1

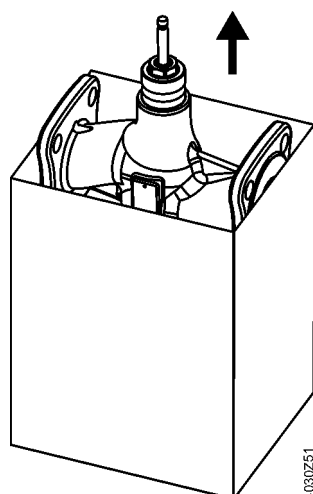


4030Z51

2

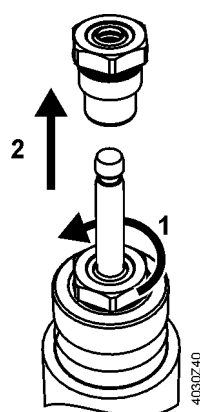

4030Z40

3

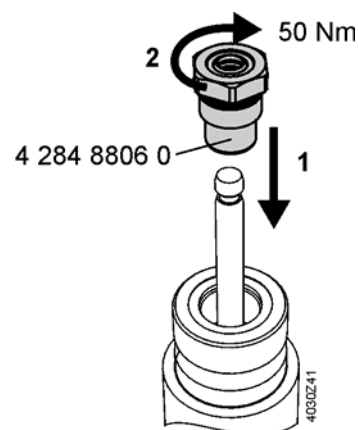

4030Z41

