










de Montageanleitung
en Mounting instructions
fr Instructions de montage
sv Monteringsinstruktion
nl Montage-aanwijzing
it Istruzioni di montaggio
fi Asennusohje
es Instrucciones de montaje

no Montasjeanvisning
da Monteringsvejledning
pl Instrukcja montażu
cs Návod k montáži
sk Návod na montáž
hu Telepítési leírás
el Οδηγίες Εγκατάστασης
sr Uputstva za montažu






hr Uputstva za montažu
sl Navodila za montažo
ro Instrucțiuni de montare
ru Инструкция по монтажу
bg Инструкция за монтаж
tr Montaj talimatları
pt Instruções de montagem



SSA955

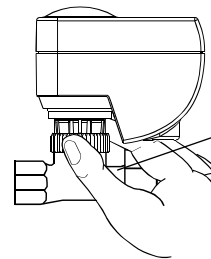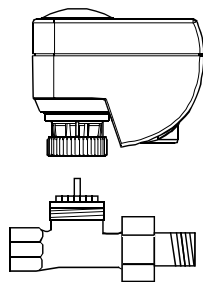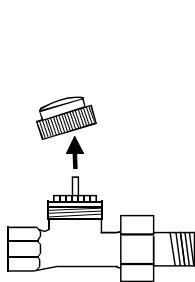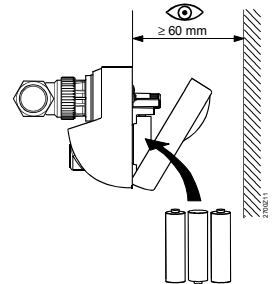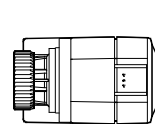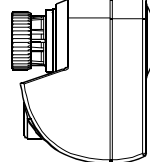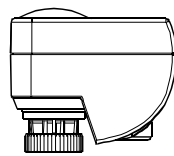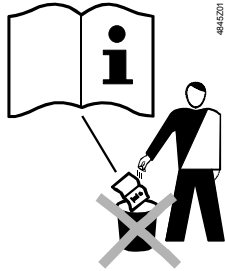

Siemens VDN..., VEN..., VUN..
Siemens VD..., VE..., VU..
Siemens VPD...VPE
Siemens 2T../A
Honeywell MNG
Cazzaniga
Heimeier
TA
Finimetall
Oventrop M30x1.5
Junkers
Beulco Verteiler M30x1,5

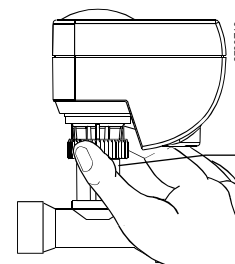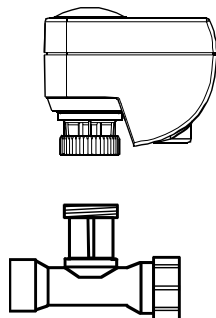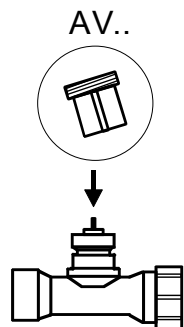

AV51 Beulco M30x1,0
AV52 Comap
AV53 Danfoss RA-N (RA2000)
AV54 Danfoss RAVL
AV55 Danfoss RAV
AV56 Giacomini
AV57 Herz
AV58 Oventrop M30x1.0
AV59 Vaillant
AV60 TA
AV61 Markaryd
AV100-MLG Siemens Radiagyr

